



Ohm / mA – V CONVERTER WITH GALVANIC SEPARATION

Z102

GENERAL FEATURES

- input for resistance measurement with connection to rheostat (2 wires) and potentiometer (3 wires);
- front panel with ZERO and SPAN trimmers.
- insulated analogue output in current (with active or passive connection) and in voltage.
- front panel with power ON indicator.
- 3-point insulation: 1500Vac.

TECHNICAL FEATURES

Power supply:	19 – 40 Vdc, 19-28 Vac 50-60Hz, max 2.5W.			
Input:	- Resistance with connection to rheostat (2 wires), ranges 0 – 300 ohms (I = 6 mA), 0 – 500 ohms (I = 3.6 mA) and 0 – 1 Kohm (I = 1.8 mA) - Resistance with connection to potentiometer (3 wires) (Vref = 1.8 Vdc).			
Output:	Output current 0 – 20 mA or 4 – 20 mA, loop impedance < 600 ohms Voltage 0 – 5 V, 1 – 5 V, 0 – 10 V and 2 – 10 V load impedance > 2 Kohms			
Environmental conditions:	Temperature: 0..50°C, Humidity min:30%, max 90% at 40°C not condensing (see also section How to install).			
Errors referred to the input's range of measurement.	Setting error:	Temperature coefficient:	Linearity error:	Other
	0.2%	0.02%/°C	0.05%	
Output/power supply protection:	against impulse overvoltage 400W/ms.			
Standards	The instrument conforms to the following standards: EN50081-2 (electromagnetic emissions, industrial environment) EN50082-2 (electromagnetic immunity, industrial environment) EN61010-1 (safety)			



HOW TO INSTALL

Z102 module is designed to be mounted on a DIN 46277 bar, in vertical position.

To obtain an optimal working and duration, it is necessary to assure an adequate ventilation to modules, avoiding to place raceways or other objects that can close abat-vents.

Avoid to mount modules over deviced that generate heat; we suggest to mount devices in the lower side of the panel.

HEAVY WORKING CONDITIONS:

Heavy working conditions are:

- High power voltage a (> 30Vdc / > 26 Vac)
- Input sensor feeded.
- Use of output in impressed current.

When modules are put side by side it s possible that it is **necessary to separate them at least 5 mm** in the following cases:

- Upper board temperature higher than 45°C and at least one of the heavy working conditions verified.
- Upper board temperature higher than 35°C and at least two of the heavy working temperature verified.



SENECAUK

Web: www.SenecaUK.com Mail: Sales@SenecaUK.com
Tel: 01943 602001 Fax 01943 816796

ELECTRICAL CONNECTIONS

We recommend to use shielded cables to do signals connection; monitor must be connected to a preferential ground for devices. Besides it is a good rule avoid to pass wires near power installation cables like inverters, motors, induction furnaces etc.

POWER SUPPLY

19-40Vdc
19-28Vac




Power voltage must be in a range from 19 to 40 Vdc (indifferent polarity), from 19 to 28 Vac; see also section **INSTALLATION NORMS**.

Upper limits must not be exceeded, if it happen there could be damages for module. It is necessary to protect power source from possible module's failure by fuse correctly dimensioned.

INPUT


Connection to rheostat (2 wires)

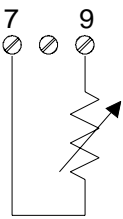

0-300 ohm




0-500 ohm



0-1 Kohm




Connection to potentiometer (3 wires)
(for potentiometers in the range 200 ohms to 1Mohm)




OUTPUT


CURRENT – ACTIVE OUTPUT

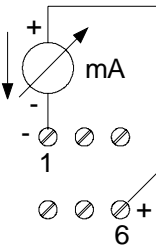

CURRENT – PASSIVE OUTPUT

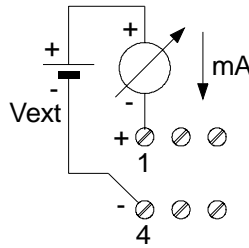

VOLTAGE

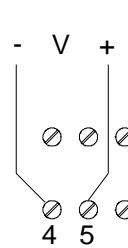


For the output in current, the **ACTIVE** connection must be used when the output loop is to be powered directly by the Z102 module, whilst the **PASSIVE** connection must be used in the event the power supply of the current loop comes from an independent source.

The Z102 module can operate a maximum load of 600 ohms on the loop, with the loop power supply protected against short-circuiting.


0-20mA




4-20mA

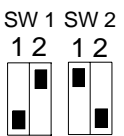

0-5V

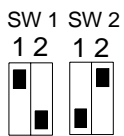

1-5V

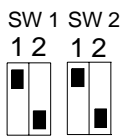

0-10V



2-10V



UNI EN ISO 9001



CERTIFICATE
Nr. 9115.SENE

SENECAUK

This document is property of SENECAUK. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

www.SenecaUK.com Sales@senecaUK.com

Tel: 01943 602001 Fax: 01943 816796

SENECAUK

Unit 1 Golden Butts Road
LS29 8HS ilkley
West Yorkshire
United Kingdom



SENECAUK

Web: www.SenecaUK.com Mail: Sales@SenecaUK.com

Tel: 01943 602001 Fax 01943 816796