

## **INSTALLATION INSTRUCTIONS**

Module Z109TC was designed for fitting to guide DIN 46277, in a vertical position.

For optimum operation and long life, make sure adequate ventilation is provided for the module/s, avoiding placing raceways or other objects which could obstruct the ventilation grilles.

Do not install the modules above appliances generating heat we advise you to install in the lower part of the panel.

### **SEVERE OPERATING CONDITIONS:**

Severe operating conditions are as follows:

- High power supply voltage (> 30Vcc / > 26 Vac).
- Use of the output on generated current.


When modules are installed side by side, it may **be necessary to separate them by at least 5 mm** in the following cases:

- If panel temperature exceed 45°C and at least one of the severe operating conditions exists.
- If panel temperature exceed 35°C and at least two of the severe operating conditions exist.

## **ELECTRICAL CONNECTIONS**

We advise you to use shielded cables for connecting signals. The shield must be connected to an earth wire used specifically for instrumentation. Moreover, it is good practice to avoid routing conductors near power appliances such as inverters, motors, induction ovens, etc.

This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

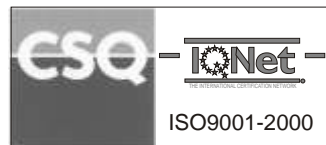

Brought to you by **SENECAUK**  
PO Box 1 - Ilkley - West Yorkshire - LS29 8HS  
Tel: 01943 602001- Fax: 01943 816796  
Web: www.SenecaUK.com - Email: Sales@SenecaUK.com



## **Z109TC CONVERTER FOR THERMOCOUPLE WITH GALVANIC SEPARATION**

### **GENERAL CHARACTERISTICS**

- Converts thermocouples J,K,R,S,T,B,E,N;
- Measurement and re-transmission on isolated analog output, with voltage and current output.
- DIP-switch for selecting: thermocouple type, zero and span, output mode (zero elevation, scale inversion), output voltage span ( 5 or 10 V )
- Front panel indicating: power on, off scale or setting error.
- 3-point insulation: 1500Vac.

### **TECHNICAL SPECIFICATIONS**

Power supply:	19 40 Vdc, 19-28 Vac 50-60Hz, max 2.5W; 1.6W @ 24Vcc with 20mA output.
Thermocouple input:	Type J,K,R,S,T,B,E,N; resolution 5uV, automatic detection of TC interruption.
All inputs:	Sampling frequency : 3 samples/second.
Output:	Generated current 0..20 / 4..20mA, max load resistance 600 ohm Voltage 0..5V / 0..10V / 1..5V / 2..10V, min load resistance 2500 ohm Resolution 0.025% (0..20mA/0..10V/0..5V) / 0.032% (4..20mA/2..10V/1..5V).
Environmental conditions:	Temperature: 0..50°C, Humidity min: 30%, max: 90% a 40°C non condensing (also see section <b>Installation instructions</b> ).

Errors referred to max measuring range:	Calibration	Thermal Coefficient	Linearity error	Others
Input for thermocouple J,K,E,T,N:	0.2%	0.02%/°C	t<0°C 0.4% t>0°C 0.05%	+/-1°C + (1) EMI: <1%
Input for thermocouple R,S:	0.2%	0.02%/°C	t<100°C 0.3% t>100°C 0.05%	+/-2°C + (1) EMI: <1%
Input for thermocouple B (2):	0.2%	0.02%/°C	t<600°C 0.3% t>600°C 0.1%	+/-4°C + (1) EMI: <1%
Cold junction compens.:	1.5°C in ambient range 10 to 40°C.			
Voltage output (3):	0.1%	0.01%/°C	0.1%	
Protection for inputs:	60V continuous.			
Protection for outputs/power supply:	against impulsive over-voltages 400W/ms.			
Data memory	EEPROM for all configuration data; storage time: 10 years			
The instrument conforms to the following standards:	EN50081-2 (electromagnetic emission, industrial environment) EN50082-2 (electromagnetic immunity, industrial environment) EN61010-1 (safety) All circuits are to be safely isolated from hazardous live by double insulation. The power supply transformer must comply with EN60742: isolating transformers and safety isolating transformers requirements			



- (1) influence of cable resistance 0.5uV/ohm.  
 (2) Output stops at 360 °C t < 360 °C.  
 (3) values to be added to the errors of the selected input.


## SELECTING THE OUTPUT

DIP-switches numbers 7 and 8 of the SW2 group enable you to set the output with or without zero elevation, or as a normal or reversed output. The SW3 DIP-switch group enables you to select the output voltage.

**N.B.: DIP-switches must be set while the module is powered down, otherwise, the module may be damaged.**

SW2	
OUTPUT MODE	
7	0..20mA / 0..5V / 0..10V
8	4..20mA / 1..5V / 2..10V
	NORMAL
	REVERSED

SW3	
OUTPUT VOLTAGE	
12	0/1..5V
	0/2..10V

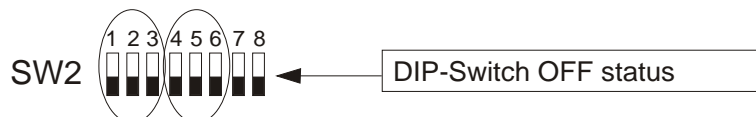

## SETTING ZERO AND SPAN AT WILL

The ZERO and SPAN push-button under the SW2 DIP-switch group enables you to set zero or span at will within the pre-set zero/span values for the type of input selected.

To obtain this facility, the following operations must be carried out:

1. Set the type of input, zero and measurement span on SW2s which include the required zero and measuring span.
2. Power up the module.
3. Supply a calibrator or simulator of the signal you wish to measure or re-transmit.
4. Set the required zero value on the calibrator (or other instrument).
5. Press the ZERO push-button for at least 3 sec. The yellow LED on the front panel flashes to indicate the value has been stored.
6. Repeat points 4 and 5 for the required SPAN value.
7. Cut power to the module and set ZERO n°1 and SPAN n°1 on group SW2 (position (\*) in table).

The module is now configured for the required span and zero. To re-program it (e.g. for a different type of input) repeat the whole procedure.

		Thermocouple J		Thermocouple K		Thermocouple R		Thermocouple S	
		ZERO	SPAN	ZERO	SPAN	ZERO	SPAN	ZERO	SPAN
	1	(*)	(*)	(*)	(*)	(*)	(*)	(*)	(*)
	2	-200°C	100°C	-200°C	200°C	0°C	400°C	0°C	400°C
	3	-100°C	200°C	-100°C	400°C	100°C	600°C	100°C	600°C
	4	0°C	300°C	0°C	600°C	200°C	800°C	200°C	800°C
	5	100°C	400°C	100°C	800°C	300°C	1000°C	300°C	1000°C
	6	200°C	500°C	200°C	1000°C	400°C	1200°C	400°C	1200°C
	7	300°C	800°C	300°C	1200°C	500°C	1400°C	600°C	1400°C
	8	500°C	1000°C	500°C	1300°C	800°C	1750°C	800°C	1750°C

		Thermocouple T		Thermocouple B		Thermocouple E		Thermocouple N	
		ZERO	SPAN	ZERO	SPAN	ZERO	SPAN	ZERO	SPAN
	1	(*)	(*)	(*)	(*)	(*)	(*)	(*)	(*)
	2	-200°C	50°C	0°C	500°C	-200°C	50°C	-200°C	200°C
	3	-100°C	100°C	500°C	600°C	-100°C	100°C	-100°C	400°C
	4	-50°C	150°C	600°C	800°C	0°C	200°C	0°C	600°C
	5	0°C	200°C	700°C	1000°C	100°C	300°C	100°C	800°C
	6	50°C	250°C	800°C	1200°C	150°C	400°C	200°C	1000°C
	7	100°C	300°C	1000°C	1500°C	200°C	600°C	300°C	1200°C
	8	150°C	400°C	1200°C	1800°C	400°C	800°C	500°C	1300°C

(\*) SPAN or ZERO are set in the memory with the PC or with the programming push-buttons